


CP-1 Call Progress Decoder Retrofit Instructions for the HC-3/AC-3 Autocoupler

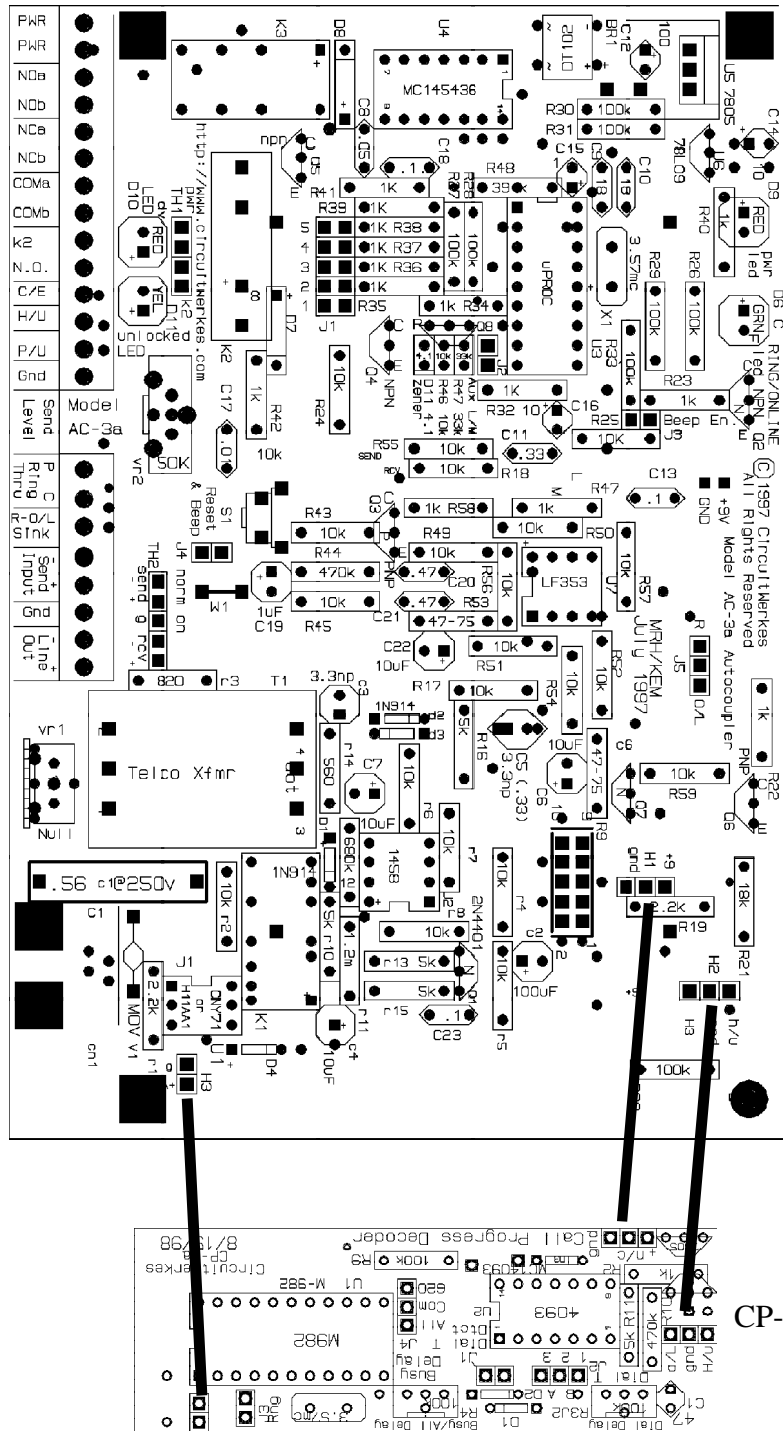

HC-3 PCB

CP-1 PCB

The CP-1 connects to the HC-3 via a series of mating pins & sockets. The CP-1 has three sets of sockets that interconnect with similar sets of pins on the coupler as shown in the drawing. Once connected, no changes are required to the autocoupler. As set from the factory, the CP-1 will cause the HC-3 to hang up within five seconds whenever dial tone or busy signals are present on the line. It is suggested that the CP-1 be unjumpered for whichever signal is **NOT** present on your line so as to minimized the possibility of dropped calls. See your CP-1 instruction sheet for details or visit the CircuitWerkes web page at <http://www.circuitwerkes.com>.